

# Ft. Worden 2004



# Gummi Bears

Eva Maria Dietrich  
<http://www.dietrich.dk>


## Step 1

- sew the middle nose-piece along the straight line to the middle of the head-piece
- sew the right nose-piece along the straight line to the right head-piece.
- Same procedure with the left side – the left side should be the mirror-piece of the right side



## Step 2

- Sew the right side on the middle-piece.
- Same procedure with the left pattern piece.
- The seam must be on the inside of the pieces!

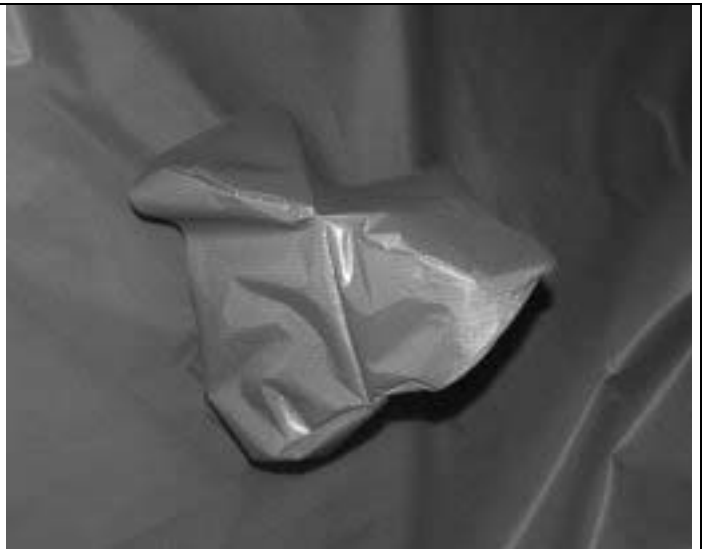

## Step 3

- Sew right and left side together, start at the nose
- Again – the seam must be inside.
- Don't sew the V-piece at the neck area together!



## Step 4

- Take two of the foot pieces and sew them together. Sew only 50% of the piece, start at the top.
- Take a third piece and sew 50% of the piece.
- Same procedure with piece number 4.
- Sew piece number 1 together with piece number 4.
- Turn the piece right side out.
- All seams must be inside.
- Same procedure with the other foot pieces and the two arms.



## Step 5

- Take 2 small and a big ear piece and sew both together along the round line.
- Turn the pieces right side out; the seam must be inside.
- Same procedure with the other ear.



## Step 6

- Take the head and one ear.
- Put the ear through the ear hole and adjust the ear.
- Sew the ear from the inside to the head.
- Same procedure with the other ear.



## Step 7

- Take the body pattern and adjust it on the table. The bottom must point in your direction. The bottom seams like a sickle.
- Take a foot piece and sew it to the hole in the bottom of the body pattern.
- Same procedure with the other foot.
- Take the hand pieces and sew them on the other side.
- All seams must be on the inside.




## Step 8

- sew the head along the V neck to the body.



## Step 9

- take the side profile and sew it to the body.
- Start at one side and sew around the whole body
- Sew the short part of the profile to the head and turn whole bear around.

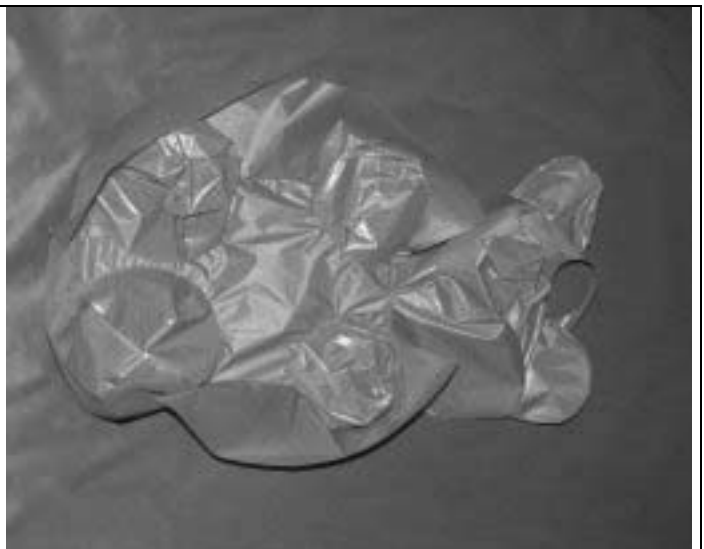

## Step 10

- Take the back piece and adjust it to the body.
- Start sewing at the top and sew 50% around.
- Start again at the top and sew the rest.
- Turn the gummi bear to the outside through the hole in the top.



## Step 11

- At last, sew the reinforcement at the top of the bear and assemble the bridle line.
- Congratulations! Your gummi bear is ready!!



